



KA Drawstop solenoid connections

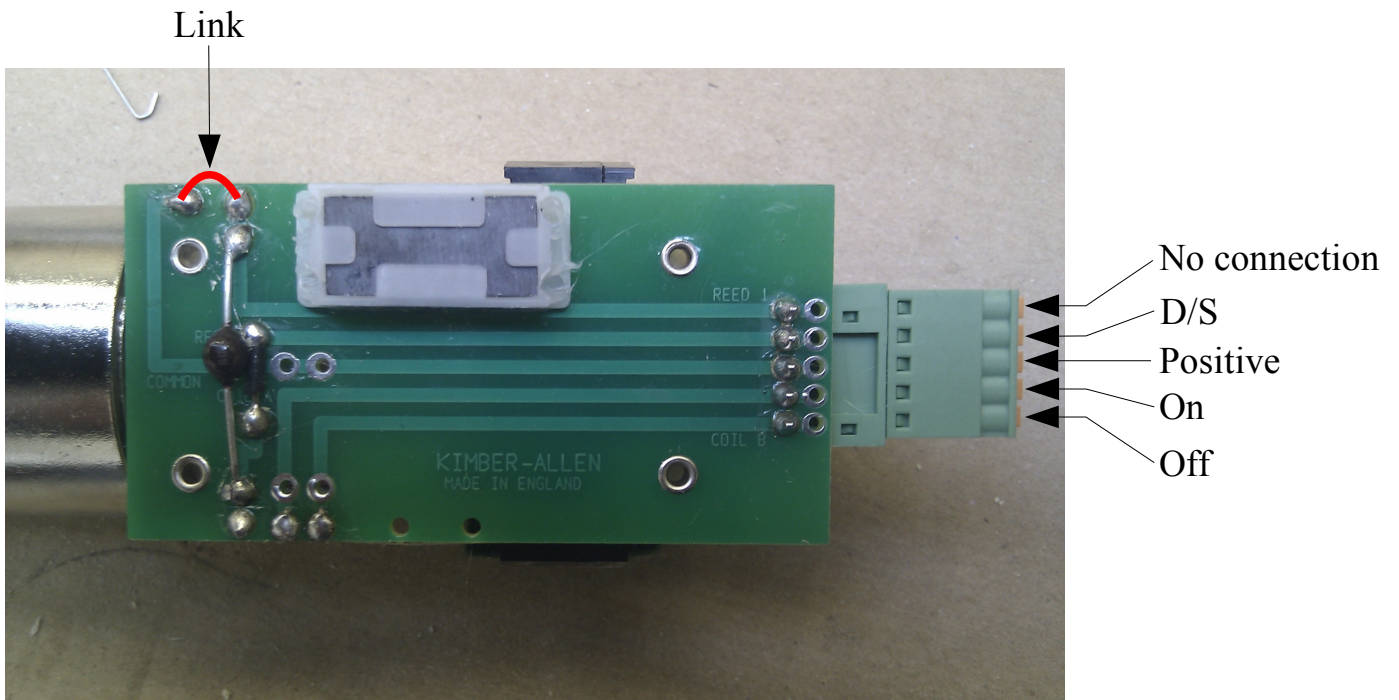

This is the more normal configuration
Note that a link has to be inserted.

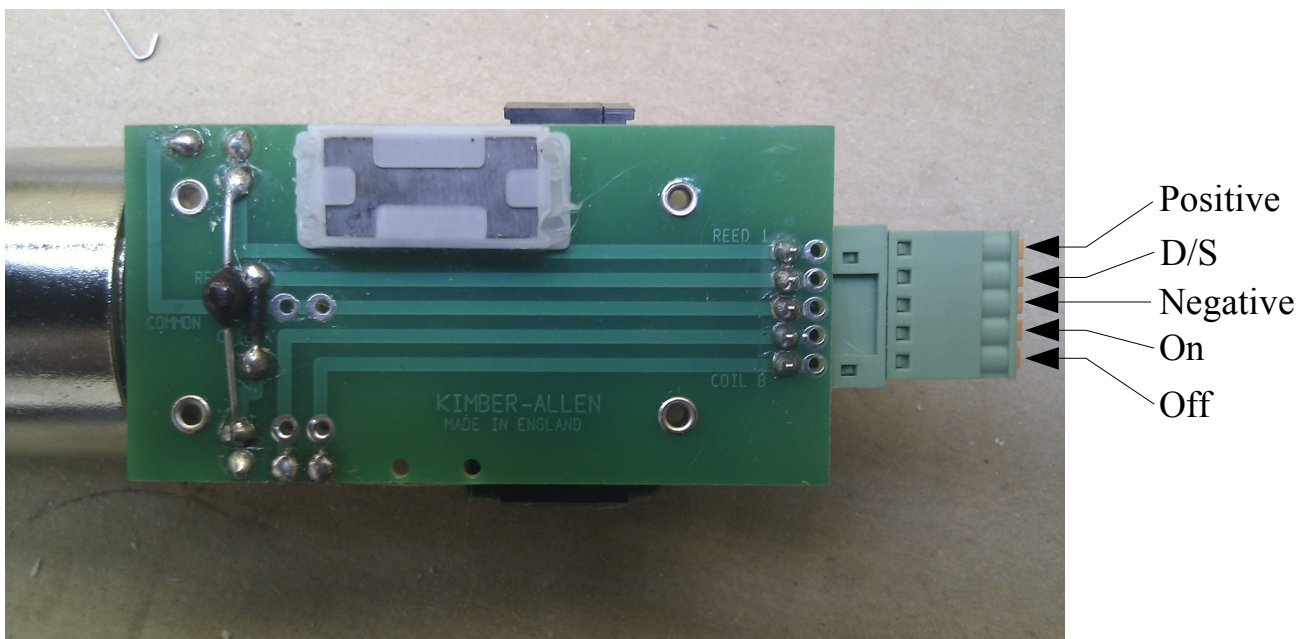

This configuration is for systems with positive outputs.
For example, some Heuss capture systems need this configuration.